



S9 Server Installation Guide

Document Version 0.1

Jan 2017

© Copyright Bitmain Technologies Holding Company 2007 – 2022. All rights reserved.

Bitmain Cayman (hereinafter referred to as 'Bitmain') reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice.

Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to Bitmain's terms and conditions of sale supplied at the time of order acknowledgment.

Bitmain warrants performance of its products to the specifications applicable at the time of sale in accordance with Bitmain's standard warranty. Testing and other quality control techniques are used to the extent Bitmain deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

Bitmain assumes no liability for third-party applications assistance. Customers are responsible for their products and applications using Bitmain components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

Bitmain does not warrant or represent that any license, either express or implied, is granted under any Bitmain patent right, copyright or other Bitmain intellectual property right relating to any combination, machine, or process in which Bitmain products or services are used. Information published by Bitmain regarding third-party products or services does not constitute a license from Bitmain to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from Bitmain under the patents or other intellectual property of Bitmain.

Resale of Bitmain products or services with statements different from or beyond the parameters stated by Bitmain for that product or service voids all express and any implied warranties for the associated Bitmain product or service and is an unfair and deceptive business practice. Bitmain is not responsible or liable for any such statements.

All company and brand products and service names are trademarks or registered trademarks of their respective holders.

All text and figures included in this publication are the exclusive property of Bitmain, and may not be copied, reproduced, or used in any way without the express written permission of Bitmain. Information in this document is subject to change without notice and does not represent a commitment on the part of Bitmain. Although the information in this document has been carefully reviewed, Bitmain does not warrant it to be free of errors or omissions. Bitmain reserves the right to make corrections, updates, revisions or changes to the information in this document.

Bitmain

Tel:+86-400-890-8855

www.bitmain.com

Table of Contents

1. Overview	4
1.1 S9 Server Components	5
1.2 Specifications	6
2. Connecting the Power Supply	7
3. Setting Up the Server	9
4. Configuring the Server	11
5 .Monitoring Your Server	12
6 .Administering Your Server	13
6.1 Checking Your Firmware Version	13
6.2 Upgrading Your System	13
6.3 Modifying Your Pass word	14
6.4 Restoring Initial Settings	14

1. Overview.

1. Overview

The S9 server is Bitmain's newest version in the S9 server series. It boasts a state-of-the-art BM1387 custom-made chip using 16nm technology. All S9 servers are tested and configured prior to shipping to ensure easy set up.




You must provide your own ATX power supply.

1. Overview.

1.1 S9 Server Components

The S9 Server main components and controller front panel are shown in the following figure:

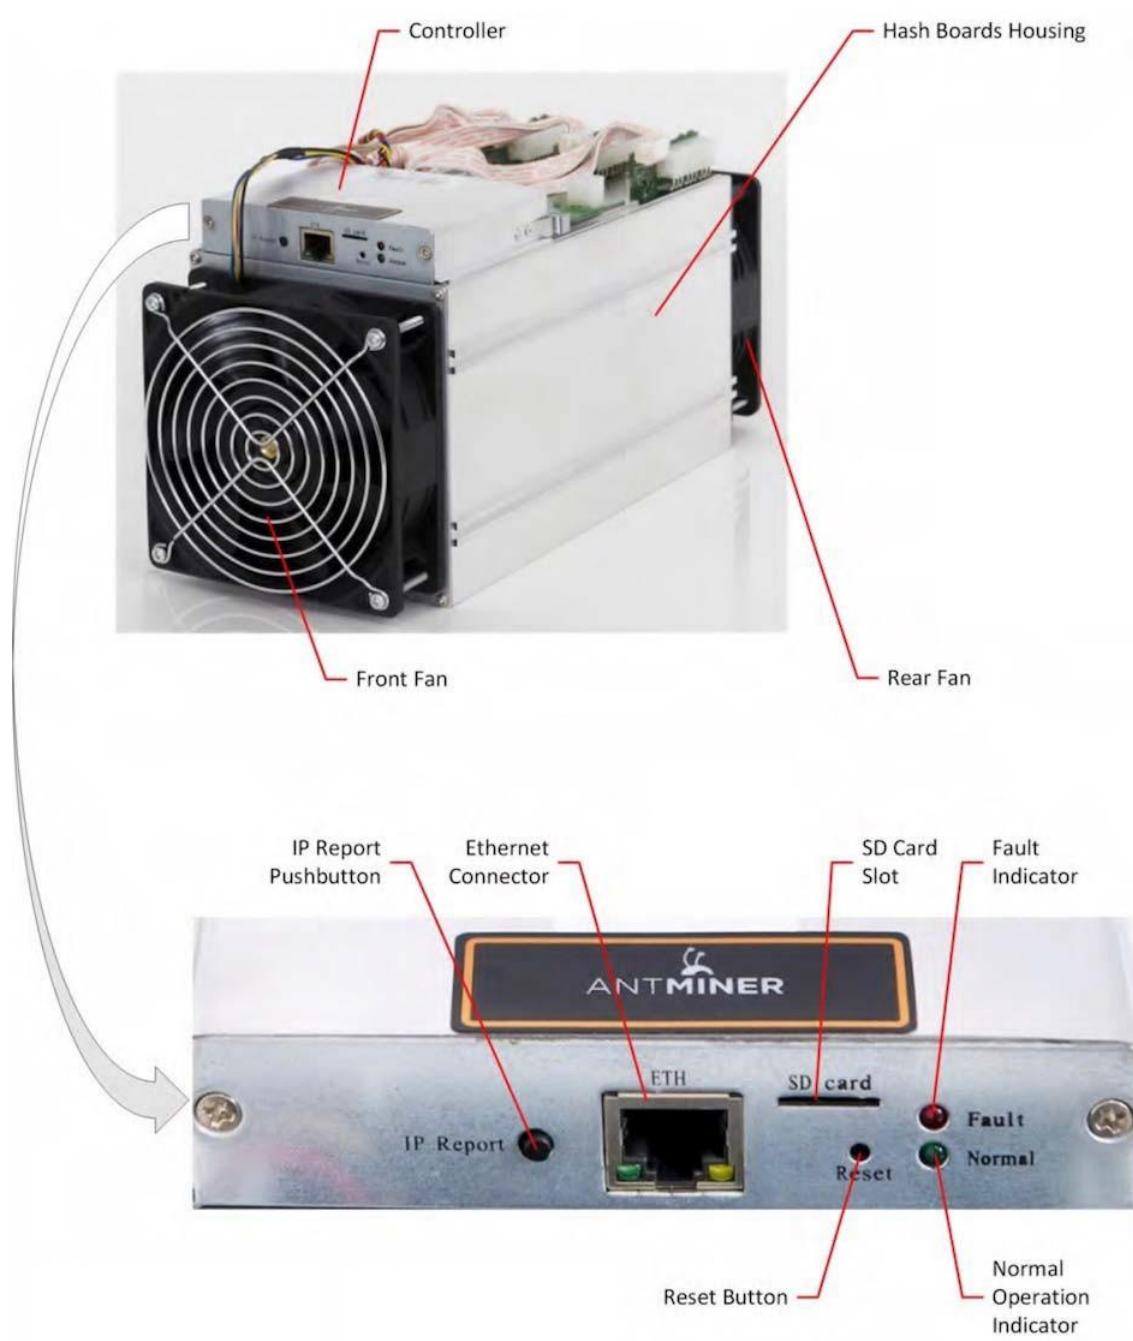

1.2 Specifications

Feature	Description			
Hash Rate	12±5%Th/s	12.5±5%Th/s	13±5%Th/s	13.5±5%Th/s
Estimated wall outlet power consumption (with APW3, 93% efficiency, 25°C ambient temperature)	1176W+10%	1225W+10%	1274W+10%	1323W+10%
Rated voltage	11.60~13.00V			
Estimated wall outlet power efficiency (with APW3, 93% efficiency, 25°C ambient temperature)	0.098J/GH+10%			
Dimensions (L x W x H)	350mm x 135mm x 158mm			
Net weight	4.2kg			
Operating ambient temperature	0~40°C			



The server does not contain a DC/DC converter; therefore, higher input voltage will cause higher Mining efficiency .

2. Connecting the Power Supply

2. Connecting the Power Supply

Ten PCI-e connectors are located at the top of the S9 server for connecting the PSU as follows:


- Nine PCI-e connectors for the hash boards. Each hash board has a set of three PCI-e connectors.
- One PCI-e connector located on the controller.



Each hashboard must be powered by the same PSU to prevent possible damage and instability.

To connect the power supply:

1. Connect PSU power cable connectors to each of the nine PCI-e connectors on the top of the S9 server, ensuring that each hash board is powered by the same PSU.

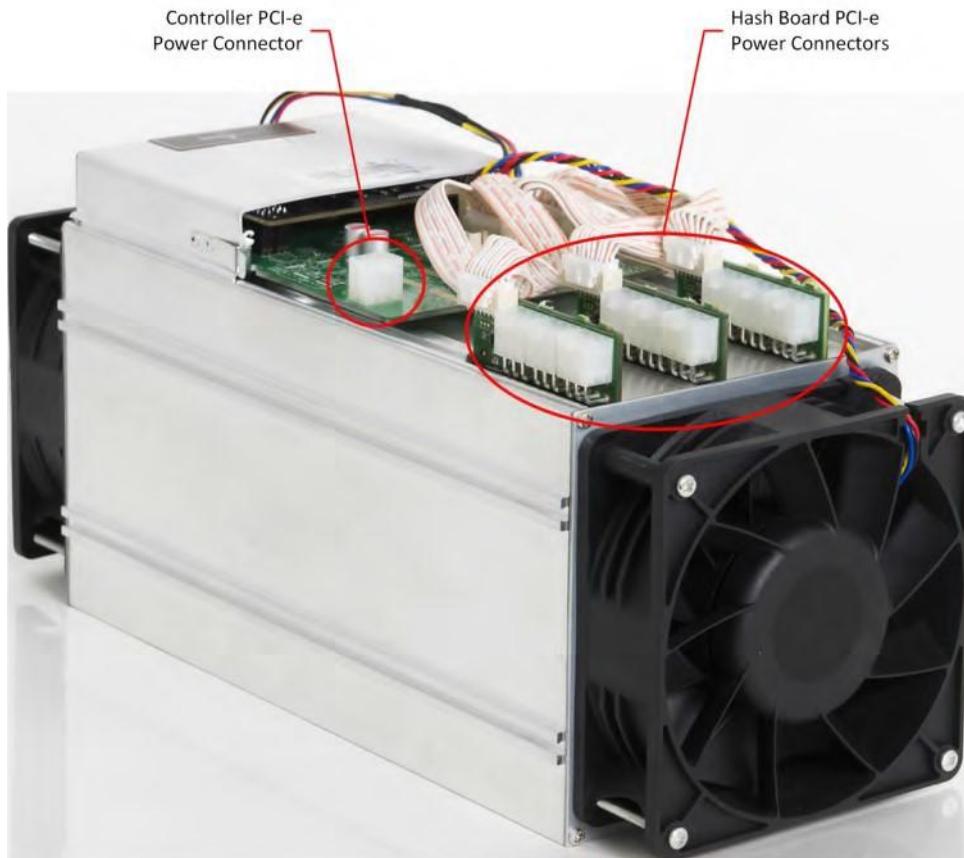

2. Connect a PSU power cable connector to the S9 PCI-e connector on the controller.
3. Connect the network cable to the ETH port.
4. To power up your S9 server, connect the PSUs to the power wall outlet.



If you are using more than one PSU, power up the PSU connected to the controller AFTER you have powered up the other PSU(s).

2. Connecting the Power Supply

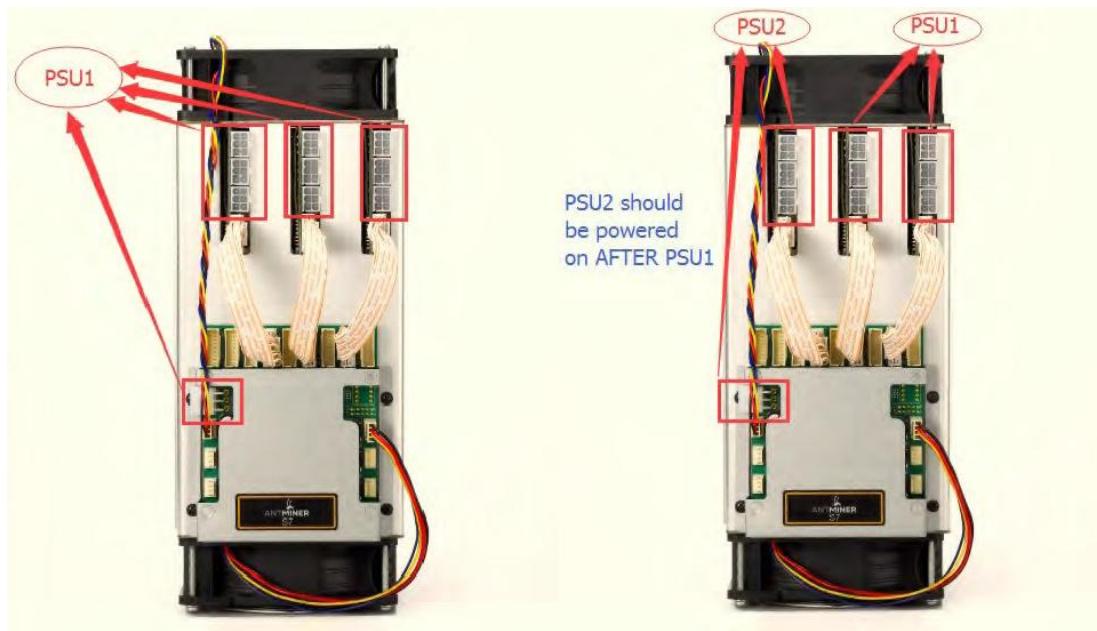


Figure 2-1. PCI-E Connectors - Correct Connection

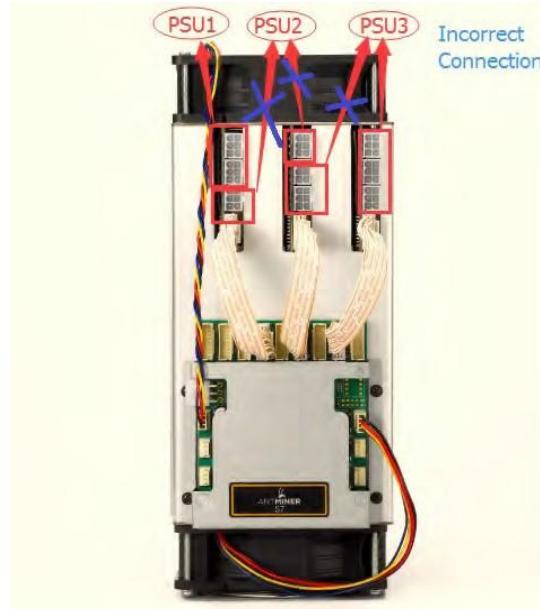


Figure 2-2. PCI-E Connectors - Incorrect Connection

3. Setting Up the Server

3. Setting Up the Server

To set up the server:


The file IPReporter.zip is supported by Microsoft Windows only.

1. Go to the following site: <https://shop.bitmain.com/support/download>
2. Choose 'Others' and download the following file: IPReporter.zip
3. Extract the file.




The default DHCP network protocol distributes IP addresses automatically.

4. Right-click **IPReporter.exe** and run it as Administrator.
5. Select one of the following options:
 - Shelf, Step, Position – suitable for farm servers to mark the location of the servers.
 - Default – suitable for home servers.
6. Click **Start**.

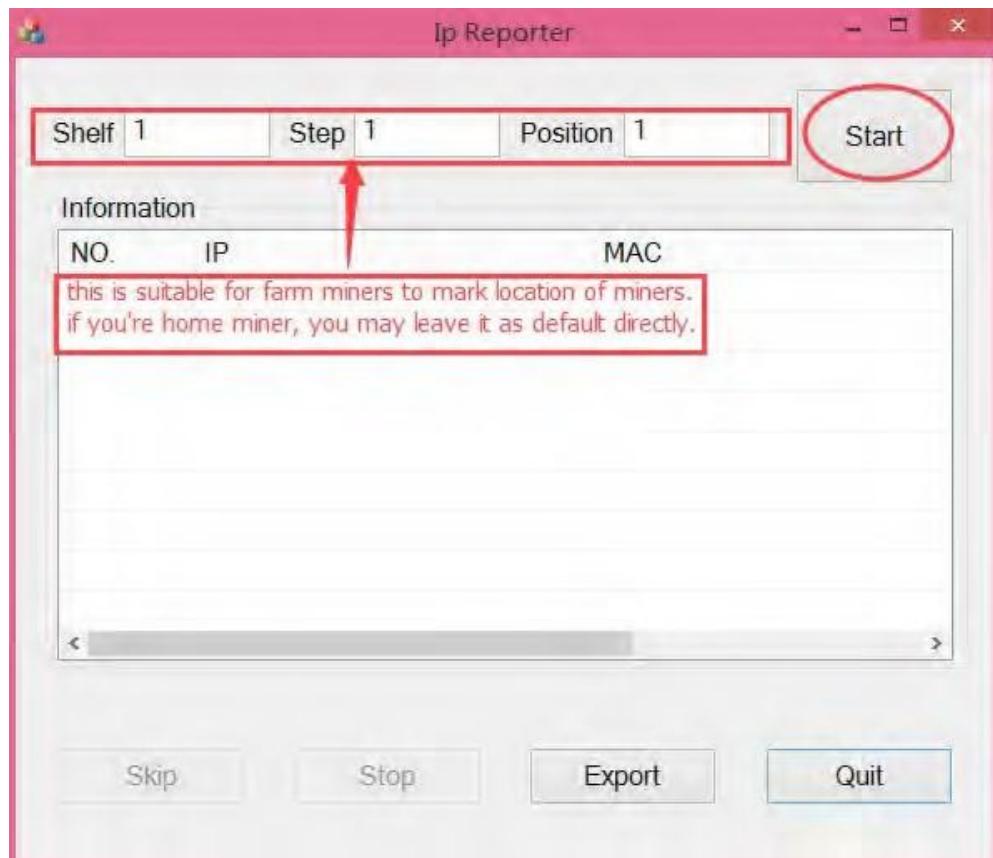


3. Setting Up the Server


7. On the controller board, click the IP Report button. Hold it down until it beeps (about 5 seconds).

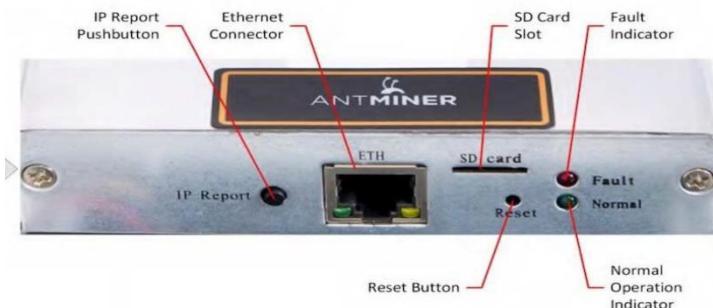

The IP address will be displayed in a window on your computer screen.

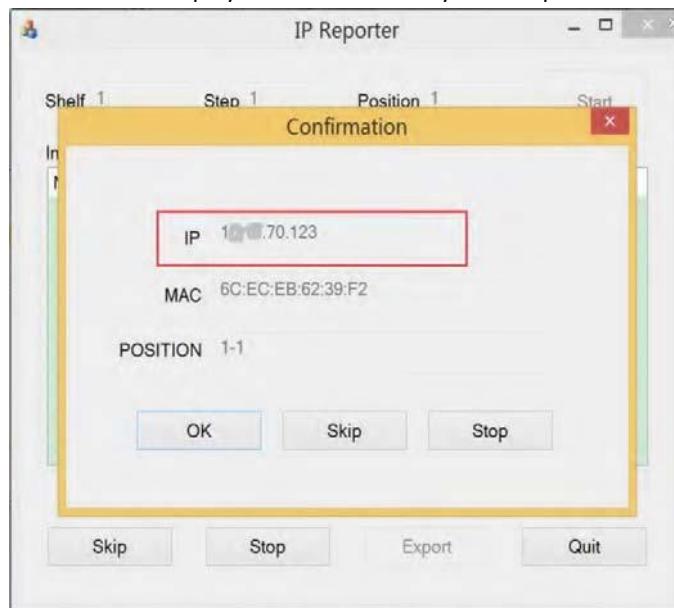

8. In your web browser, enter the IP address provided.
9. Proceed to login using `root` for both the username and password.
10. In the Network section, you can assign a Static IP address (optional).
11. Click **Save & Apply**.

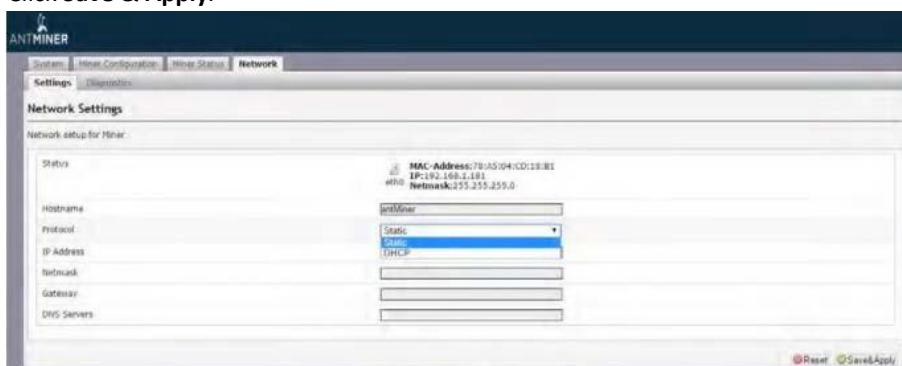

4. Configuring the Server

4. Configuring the Server


Setting Up the Pool

To configure the server:

1. Click **General Settings**.
2. Set the options according to the following table:

Option	Description
Pool URL	Enter the URL of your desired pool. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> The S9 server can be set up with three mining pools, with decreasing priority from the first pool (pool 1) to the third pool (pool 3).  The pools with low priority will only be used if all higher priority pools are offline. </div>
Worker	Your worker ID on the selected pool.
Password	The password for your selected worker.

3. Click **Save & Apply** to save and restart the server.

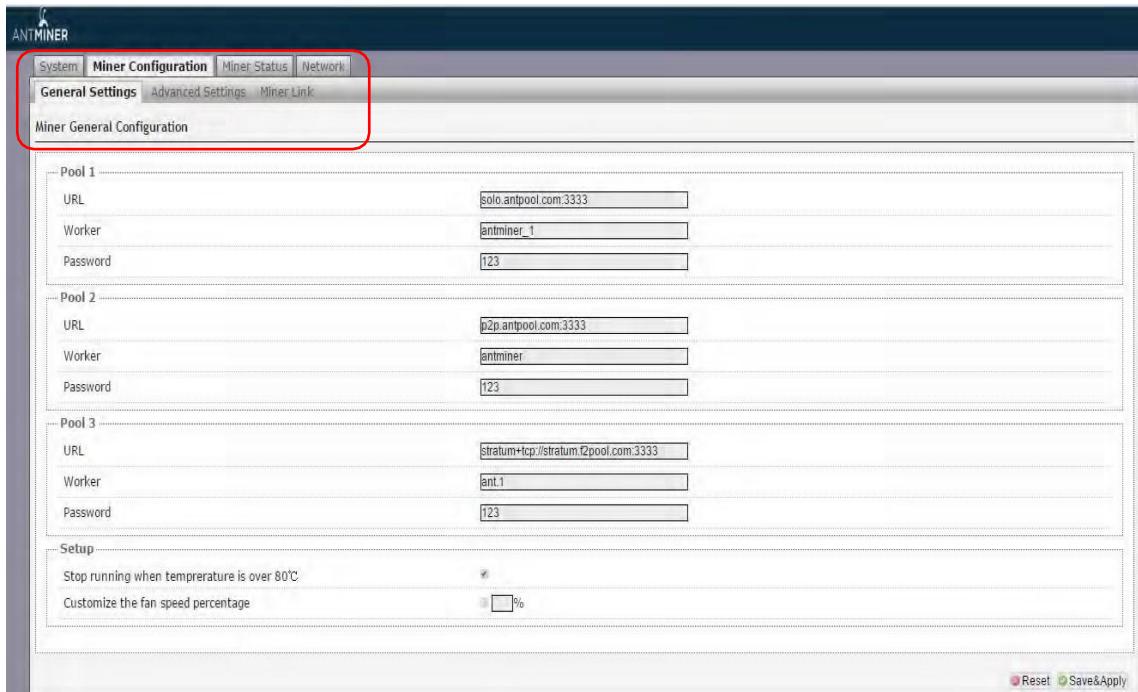

The screenshot shows the ANTMINER S9 Server Configuration interface. The top navigation bar includes tabs for System, Miner Configuration (which is selected and highlighted with a red box), Miner Status, and Network. Under the Miner Configuration tab, the sub-tab General Settings is selected. The main content area displays the 'Miner General Configuration' settings. It includes three sections for mining pools: Pool 1, Pool 2, and Pool 3. Each pool section has fields for URL (e.g., solo.antpool.com:3333), Worker (e.g., antminer_1), and Password (e.g., 123). Below these is a 'Setup' section with two checkboxes: 'Stop running when temperature is over 80°C' and 'Customize the fan speed percentage'. At the bottom right are 'Reset' and 'Save&Apply' buttons.

5. Monitoring Your Server

5. Monitoring Your Server

To check the operating status of your server:

1. Click the status marked below.
2. Monitor your server according to the descriptions in the following table:

Option	Description
ASIC#	Number of chips detected in the chain.
Frequency	ASIC frequency setting.
GH/S(RT)	Hash rate of each hash board (GH/s)
Temp(PCB)	Temperature of each hash board (°C).(Applied only to server with fixed frequency)
Temp(Chip)	Temperature of the chips on each hash board (°C).
ASIC status	<p>One of the following statuses will appear:</p> <ul style="list-style-type: none"> ● O - indicates OK ● X - indicates error ● -- indicates dead

Miner Status																	
Summary																	
Elapsed		GH/S(RT)		GH/S(avg)		FoundBlocks				LocalWork		Utility		WU		BestShare	
1h26m		11,646.47		11,688.20		0				222,356		4.99		163,637.58		98004019	
Pools																	
Pool	URL		User	Status	Diff	GetWorks	Priority	Accepted	Diff1#	DiffA#	DiffR#	DiffS#	Rejected	Discarded	Stale	LSDiff	LSTime
0	stratum+tcp://solo.antpool.com:3333		antminer_1	Alive	32.8K	106	0	429	0	14,057,472	15,360	0	15	2,677	0	32,768	0:00:05
1	stratum+tcp://stratum.antpool.com:3333		antminer_1	Alive	2	1	0	0	0	0	0	0	0	0	0	0	Never
2	stratum+tcp://cn.ss btc.com:3333		antminer_1	Dead	0	2	0	0	0	0	0	0	0	0	0	0	Never
total						108		429	0	14,057,472	15,360	0	15	2,677	0		
HW										0	0.0007%						
AntMiner																	
Chain#	ASIC#	Frequency(avg)	GH/S(ideal)	GH/S(RT)	HW	Temp(Chip1)	Temp(Chip2)	ASIC status									
6	57	591.56	3,833.56	3,852.60	0	83	72	00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0									
7	57	590.36	3,833.29	3,899.80	1	80	77	00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0									
8	57	591.50	3,834.36	3,894.07	100	83	71	00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 0									
Total	171	591.14	11,501.22	11,646.47													
Fan#	Fan1		Fan2		Fan3		Fan4		Fan5		Fan6		Fan7		Fan8		
Speed (r/min)	0		0		3,600		0		0		3,840		0		0		



Note: The S9 server is with automatic frequency adjustment. Firmware will stop running when the Temp(chips) reaches to 125-135 °C , there will be an error message “Fatal Error: Temperature is too high!” shown in the bottom of kernel log page.


6. Administering Your Server

6. Administering Your Server

6.1 Checking Your Firmware Version

To check your firmware version:

1. In **System**, click the **Overview** tab.
2. **File System Version** displays the date of the firmware your server use. In the example below, the server is using firmware version 20170108.

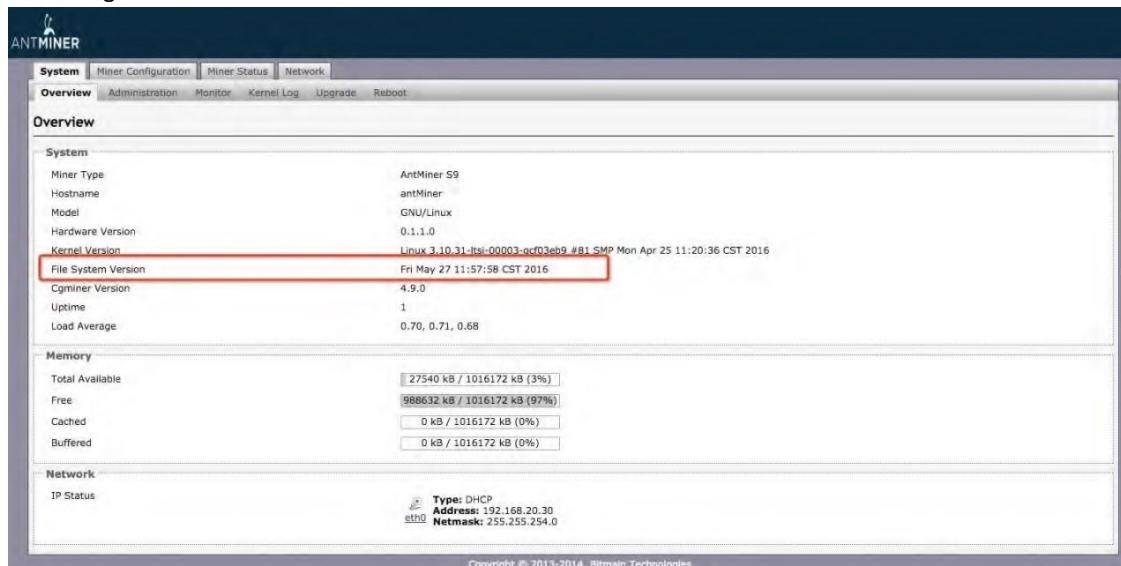

ANTMINER

System Miner Configuration Miner Status Network

Overview Administration Monitor Kernel Log Upgrade Reboot

Overview

System

Miner Type	AntMiner S9
Hostname	antMiner
Model	GNU/Linux
Hardware Version	0.1.1.0
Kernel Version	Linux 3.10.31-ltsi-00003-qcf03eb9 #81 SMP Mon Apr 25 11:20:36 CST 2016
File System Version	Fri May 27 11:57:58 CST 2016
Cgminer Version	4.9.0
Uptime	1
Load Average	0.70, 0.71, 0.68

Memory

Total Available	27540 kB / 1016172 kB (3%)
Free	988632 kB / 1016172 kB (97%)
Cached	0 kB / 1016172 kB (0%)
Buffered	0 kB / 1016172 kB (0%)

Network

IP Status	Type: DHCP Address: 192.168.20.30 eth0 Netmask: 255.255.254.0
-----------	---

Copyright © 2013-2014, Bitmain Technologies

6.2 Upgrading Your System



Make sure that the S9 server remains powered during the upgrade process. If power fails before the upgrade is completed, you will need to return it to Bitmain for repair.

To upgrade the server's firmware:

1. In System, click **Upgrade**.



ANTMINER

System Miner Configuration Miner Status Network

Overview Administration Monitor Kernel Log Upgrade Reboot

Upgrade

Backup / Restore
 Click "Generate archive" to download a tar archive of the current configuration files. To reset the firmware to its initial state, click "Perform reset" (only possible with squashfs images).

Download backup:

Reset to defaults:

To restore configuration files, you can upload a previously generated backup archive here.

Restore backup: 未选择任何文件

Flash new firmware Image
 Upload a sysupgrade-compatible image here to replace the running firmware. Check "Keep settings" to retain the current configuration.

Keep settings:

Image: 未选择任何文件

Regulation:
FCC Notice (FOR FCC CERTIFIED MODELS):

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

EU WEEE: Disposal of Waste Equipment by Users in Private Household in the European Union


This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

台灣 ROHS:

設備名稱: _____, 型號: _____						
單元	有害物质					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr+6)	多溴聯苯 (PBB)	多溴二苯 醚 (PBDE)
外殼	○	○	○	○	○	○
電路板組 件	—	○	○	○	○	○
其他線材	—	○	○	○	○	○

備考 1. “超出 0.1 wt %” 及 “超出 0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。

備考 2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。

備考 3. “—” 係指該項限用物質為排除項目