



# **T15 Server**

# **Installation Guide**

**Document Version 0.1**

**Jan. 2019**

© Copyright Bitmain Technologies Holding Company 2007 – 2022, All rights reserved.

Bitmain Cayman (hereinafter referred to as 'Bitmain') reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice.

Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to Bitmain's terms and conditions of sale supplied at the time of order acknowledgment.

Bitmain warrants performance of its products to the specifications applicable at the time of sale in accordance with Bitmain's standard warranty. Testing and other quality control techniques are used to the extent Bitmain deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

Bitmain assumes no liability for third-party applications assistance. Customers are responsible for their products and applications using Bitmain components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards. Bitmain does not warrant or represent that any license, either express or implied, is granted under any Bitmain patent right, copyright or other Bitmain intellectual property right relating to any combination, machine, or process in which Bitmain products or services are used. Information published by Bitmain regarding third-party products or services does not constitute a license from Bitmain to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from Bitmain under the patents or other intellectual property of Bitmain.

Resale of Bitmain products or services with statements different from or beyond the parameters stated by Bitmain for that product or service voids all express and any implied warranties for the associated Bitmain product or service and is an unfair and deceptive business practice. Bitmain is not responsible or liable for any such statements.

All company and brand products and service names are trademarks or registered trademarks of their respective holders.

All text and figures included in this publication are the exclusive property of Bitmain, and may not be copied, reproduced, or used in any way without the express written permission of Bitmain. Information in this document is subject to change without notice and does not represent a commitment on the part of Bitmain. Although the information in this document has been carefully reviewed, Bitmain does not warrant it to be free of errors or omissions. Bitmain reserves the right to make corrections, updates, revisions or changes to the information in this document.

Bitmain  
Tel:+86-400-890-8855  
[www.bitmain.com](http://www.bitmain.com)

**Table of Contents**

<b>1. Overview</b> .....	<b>4</b>
1.1 T15 Server Components.....	5
1.2 Specifications.....	7
<b>2. Setting Up the Server</b> .....	<b>9</b>
<b>3. Configuring the Server</b> .....	<b>11</b>
<b>4. Monitoring Your Server</b> .....	<b>12</b>
<b>5. Administering Your Server</b> .....	<b>13</b>
5.1 Checking Your Firmware Version.....	13
5.2 Upgrading Your System.....	13
5.3 Modifying Your Password.....	14
5.4 Restoring Initial Settings.....	14
<b>Regulations</b> .....	<b>15</b>

## 1. Overview


The T15 server is Bitmain's newest version in the T15 server series. Power supply APW8 is part of T15 server. All T15 servers are tested and configured prior to shipping to ensure easy set up.

**Caution:**

1. The socket-outlet shall be installed near the equipment and shall be easily accessible.
2. Please refer to the layout above to place your goods in usage in case of any damage.

## 1.1 T15 Server Components

The main components and controller front panel of T15 server are shown in the following figure:

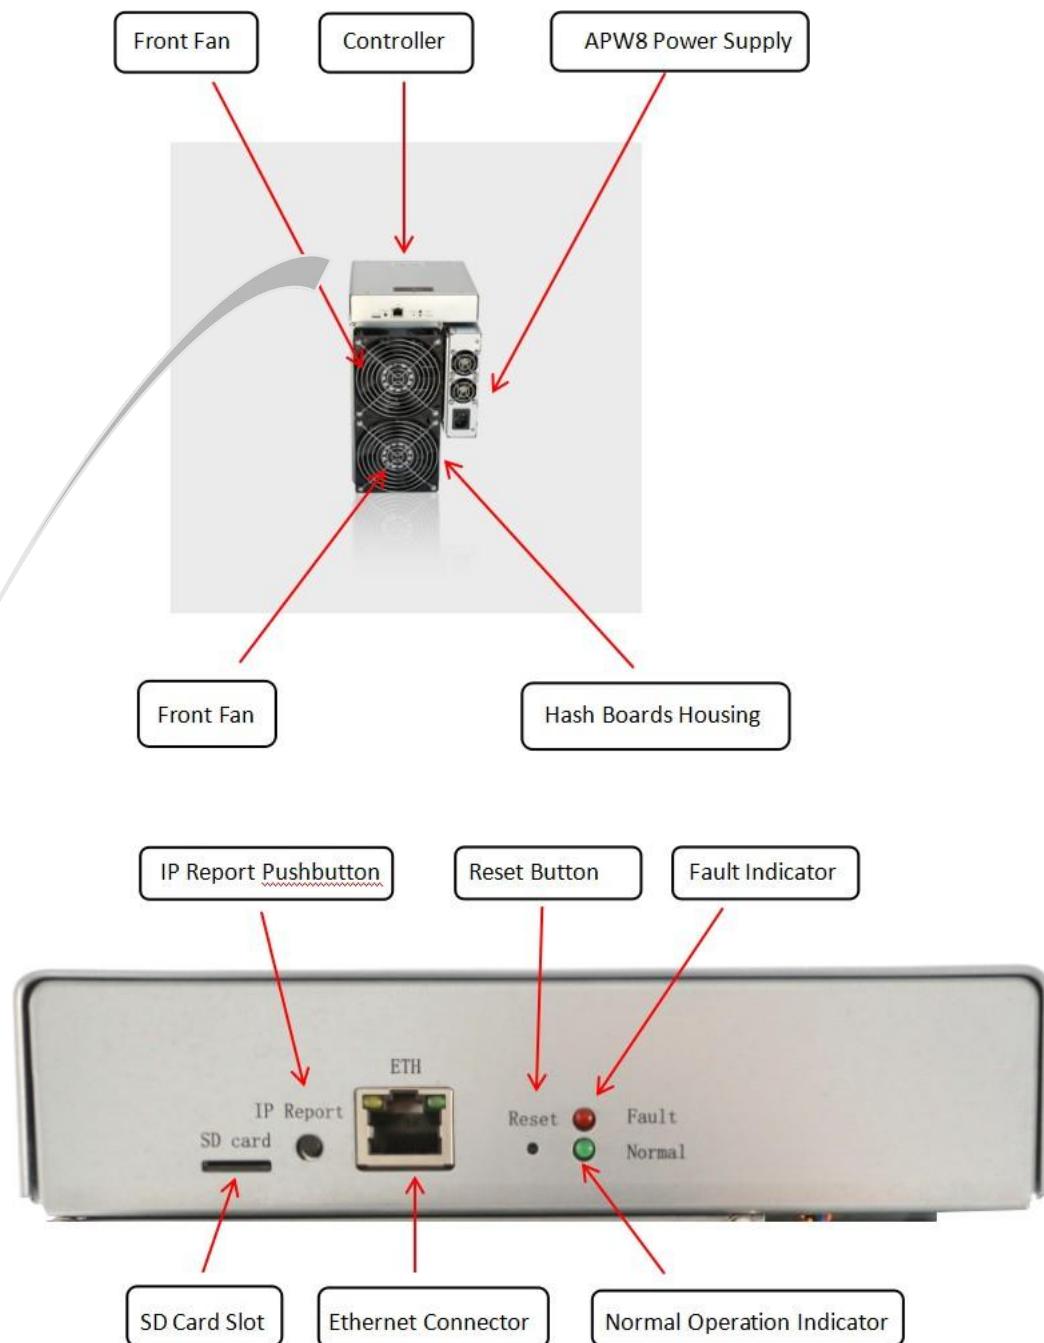

**APW8 Power Supply:****Note:**

1. Power supply APW8 is part of T15 server. For detailed parameters, please refer to the specifications below.
2. Additional power cord is needed.

## 1.2 Specifications

**Model No.: 240-A**

**Version: T15**

Product Glance	Value		
Crypto Algorithm	SHA256		
	Normal	Low Power	
Hashrate, TH/s	23.00	17.50~21.00	
Reference power on wall, Watt	1541	1050~1260	
Reference power efficiency on wall @25°C, J/TH	67.00	60.00	

Detailed Characteristics	Value		
	Min	Typ	Max
<b>Hashrate &amp; Power</b>			
Hashrate, TH/s	Normal		23.00
	Low Power		17.50~21
Power efficiency on wall @25°C, J/TH	Normal	67.00	71.69
	Low Power	60.00	64.20
Power efficiency on wall @40°C, J/TH	Normal	70.52	75.46
	Low Power	62.92	67.32
Power on wall, Watt <sup>(1-2)</sup>	Normal	1541	1770
	Low Power	1050	1456
Power supply AC input voltage, Volt <sup>(1-3)</sup>	200	220	240
Power supply AC input current, Amp <sup>(1-4)</sup>	Normal	7.00	8.85
	Low Power	4.77	7.28
Power supply Input AC Frequency Range, Hz	47	50	63
<b>Hardware Configuration</b>			
Quantity of hash chips	180		
Quantity of hash boards	3		
Networking connection mode	RJ45 Ethernet 10/100M		

Server Size (Length*Width*Height, w/o package),mm <sup>(2-1)</sup>	<b>205*175*279</b>			
Net weight, kg <sup>(2-2)</sup>	<b>6.6</b>			
Noise, dBA @25°C <sup>(2-3)</sup>				
<b>Environment Requirements</b>				
Operation temperature,°C	<b>0</b>	<b>0</b>	<b>25</b>	<b>40</b>
Storage temperature,°C	<b>-40</b>	<b>-40</b>	<b>25</b>	<b>85</b>
Operation humidity, RH	<b>5%</b>	<b>5%</b>		<b>95%</b>

**Notes:**

- (1-1) In Low Power Mode, Max Hashrate should be **Typ hashrate \*103%**
- (1-2) Min condition: 25°C, min J/TH, typical hashrate  
Max condition: 40°C, max J/TH, max hashrate
- (1-3) Caution: Wrong input voltage may probably cause server damaged**
- (1-4) Typ condition: min reference power, typical AC input voltage  
Max condition: max reference power, min AC input voltage
- (2-1) Including PSU size
- (2-2) Including PSU weight
- (2-3) Max condition: Fan is under max RPM(rotation per minute)

## 2. Setting Up the Server

### To set up the server:



The file IPReporter.zip is supported by Microsoft Windows only.


1. Go to the following site: <https://shop.bitmain.com/support/download>
2. Choose 'Others' and download the following file: IPReporter.zip
3. Extract the file.




The default DHCP network protocol distributes IP addresses automatically.

4. Right-click **IPReporter.exe** and run it as Administrator.
5. Select one of the following options:
  - Shelf, Step, Position – suitable for farm servers to mark the location of the servers.
  - Default – suitable for home servers.


6. Click **Start**.

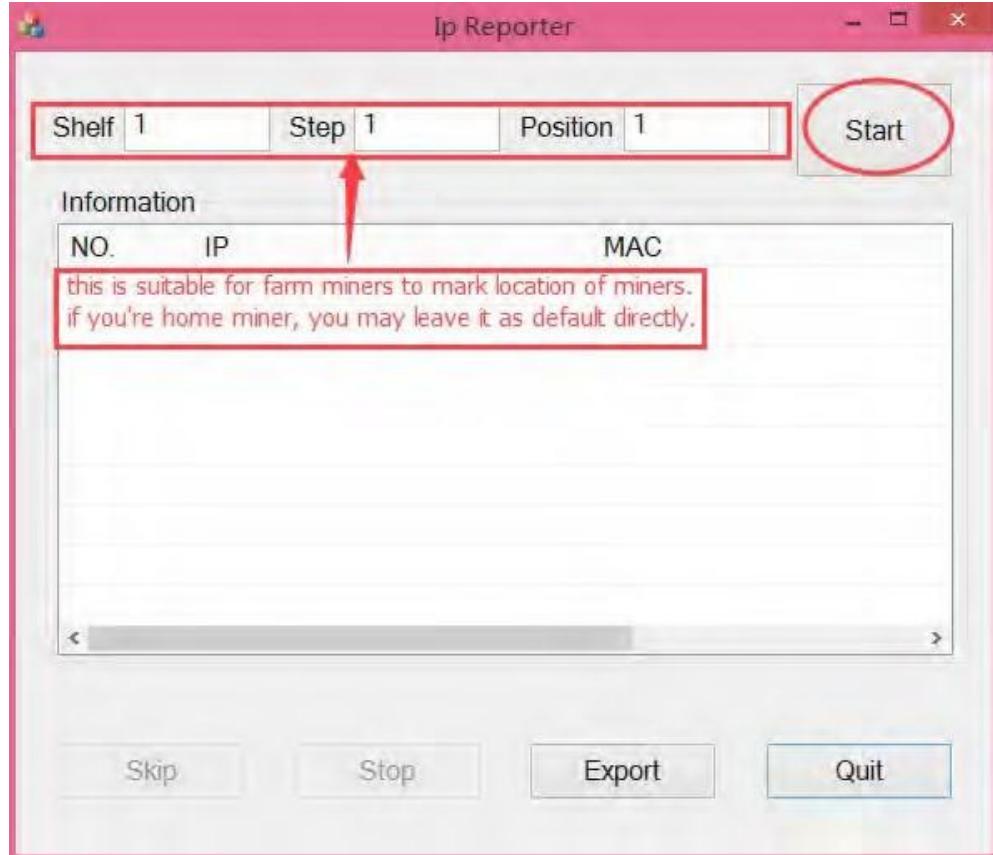


7. On the controller board, click the IP Report button. Hold it down until it beeps (about 5 seconds).

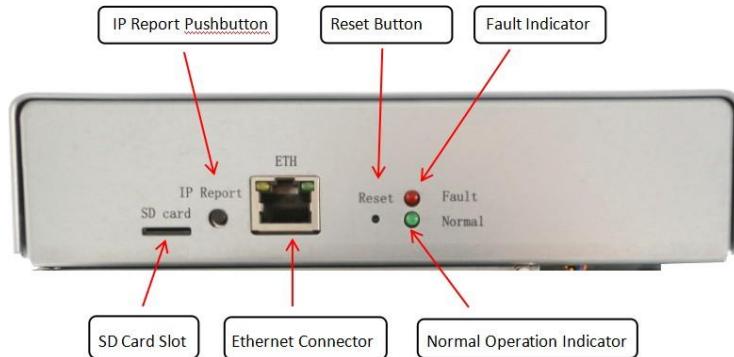

The IP address will be displayed in a window on your computer screen.

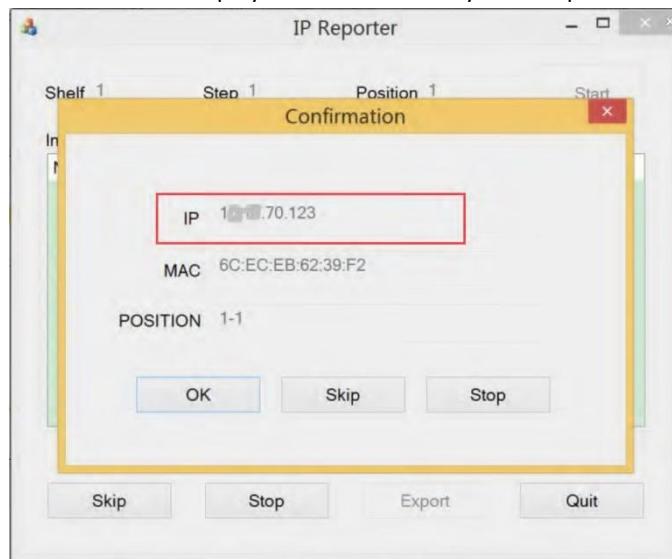

8. In your web browser, enter the IP address provided.  
9. Proceed to login using root for both the username and password.  
10. In the Network section, you can assign a DHCP IP address (optional).  
11. Click **Save & Apply**.

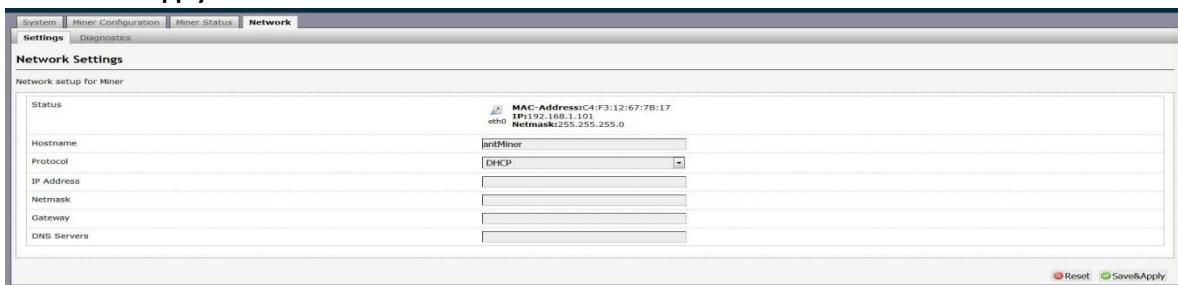


## 3. Configuring the Server

### Setting Up the Pool

To configure the server:

1. click **General Settings**.

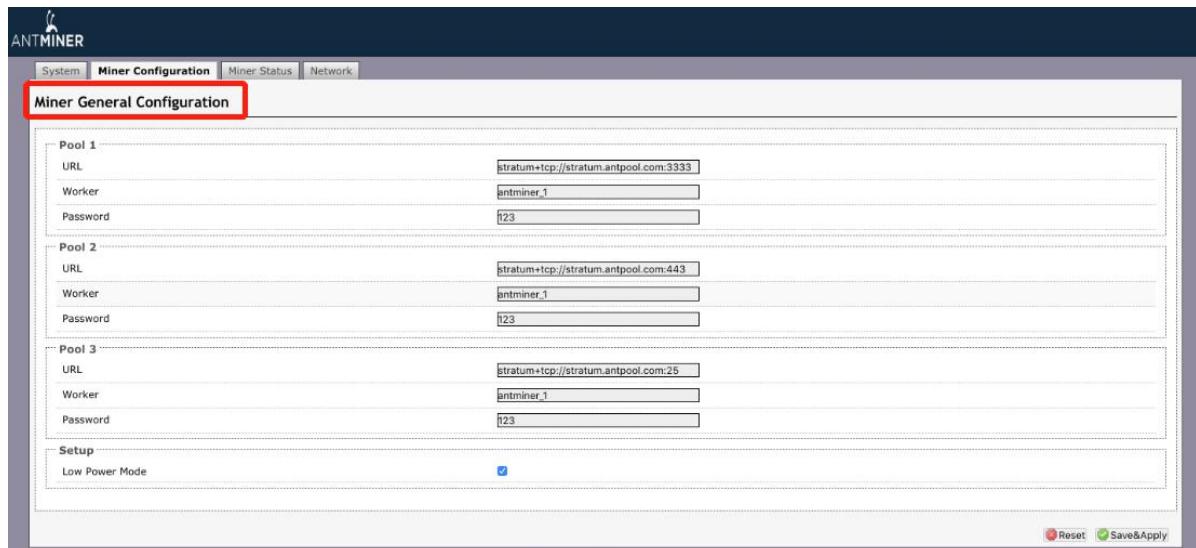

**Note:** There are two modes of Hashrate which u may adjust for T15 server: Low Power Mode and Normal Mode. Power consumption varies with different mode. Please refer to the specifications above for more details.

2. Set the options according to the following table:

Option	Description
Pool URL	Enter the URL of your desired pool. <div style="border: 1px solid black; padding: 10px; margin-top: 10px;"> <p>The T15 server can be set up with three mining pools, with decreasing priority from the first pool (pool 1) to the third pool (pool 3).</p> <p>The pools with low priority will only be used if all higher priority pools are offline.</p> </div>
Worker	Your worker ID on the selected pool.
Password	The password for your selected worker.


3. Click Save & Apply to save and restart the server.

## 4. Monitoring Your Server

### 4. Monitoring Your server

To check the operating status of your server:

1. Click the status marked below.

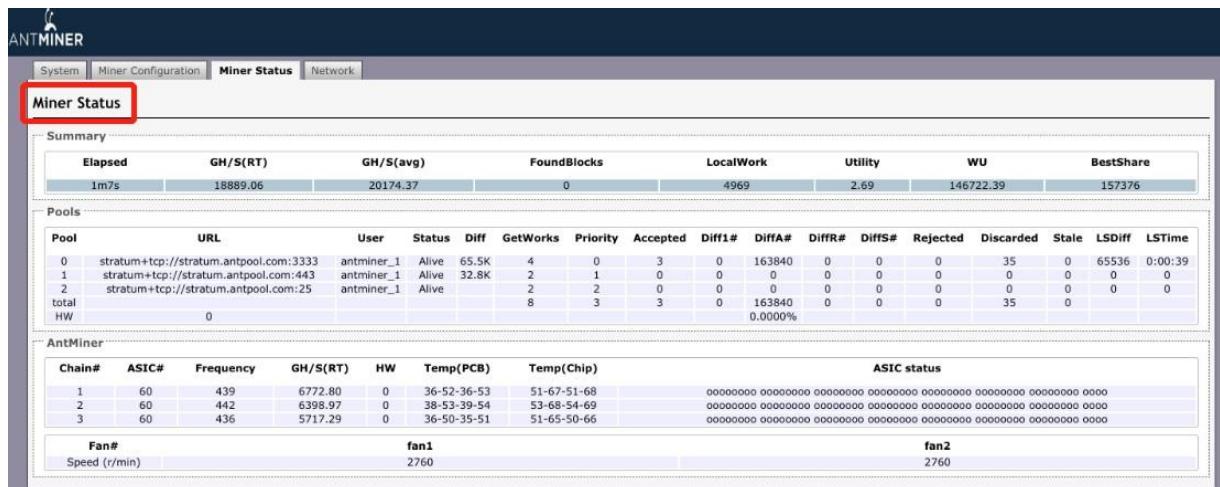

The screenshot shows the ANTRMINER software interface with the 'Miner Status' tab selected. The interface is divided into several sections:

- Summary:** Shows metrics like Elapsed (1m7s), GH/S(RT) (18889.06), GH/S(avg) (20174.37), FoundBlocks (0), LocalWork (4969), Utility (2.69), WU (146722.39), and BestShare (157376).
- Pools:** Lists mining pools with their URLs, users, status, and performance metrics. For example, pool 0 has stratum+tcp://stratum.antpool.com:3333, user antminer\_1, and status Alive.
- AntMiner:** Shows ASIC# (Chain#), Frequency, GH/S(RT), HW, Temp(PCB), and Temp(Chip) for three ASICs (1, 2, 3). For ASIC 1, Temp(PCB) is 6772.80 and Temp(Chip) is 51-67-51-68.
- Fan:** Shows fan1 (Speed: 2760) and fan2 (Speed: 2760).



**Note:** The T15 server is with automatic frequency adjustment. Firmware will stop running when the Temp(PCB) reaches to 80°C, there will be an error message "Fatal Error: Temperature is too high!" shown in the bottom of kernel log page.

2. monitor your server according to the descriptions in the following table:


Option	Description
ASIC#	Number of chips detected in the chain.
Frequency	ASIC frequency setting.
GH/S(RT)	Hash rate of each hash board ( GH/s)
Temp(PCB)	Temperature of each hash board (°C).(Applied only to server with fixed frequency)
Temp(Chip)	Temperature of the chips on each hash board (°C).
ASIC status	<p>One of the following statuses will appear:</p> <ul style="list-style-type: none"> <li>● <b>O</b> - indicates OK</li> <li>● <b>X</b> - indicates error</li> <li>● <b>--</b> indicates dead</li> </ul>

## 5. Administering Your Server

### 5.1 Checking Your Firmware Version

To check your firmware version:

1. In **System**, click the **Overview** tab.
2. **File System Version** displays the date of the firmware your server use. In the example below, the server is using firmware version 20181130.

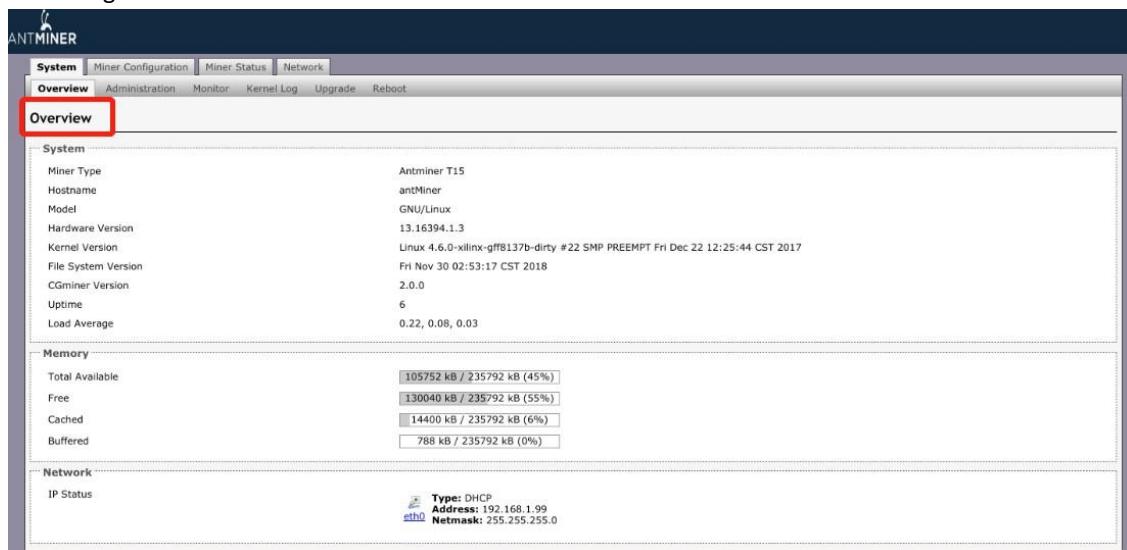

The screenshot shows the ANTMINER T15 web interface with the 'Overview' tab selected. The 'File System Version' section displays the following information:

Fri Nov 30 02:53:17 CST 2018


### 5.2 Upgrading Your System



Make sure that the T15 server remains powered during the upgrade process. If power fails before the upgrade is completed, you will need to return it to Bitmain for repair.

To upgrade the server's firmware:

1. In **System**, click **Upgrade**.

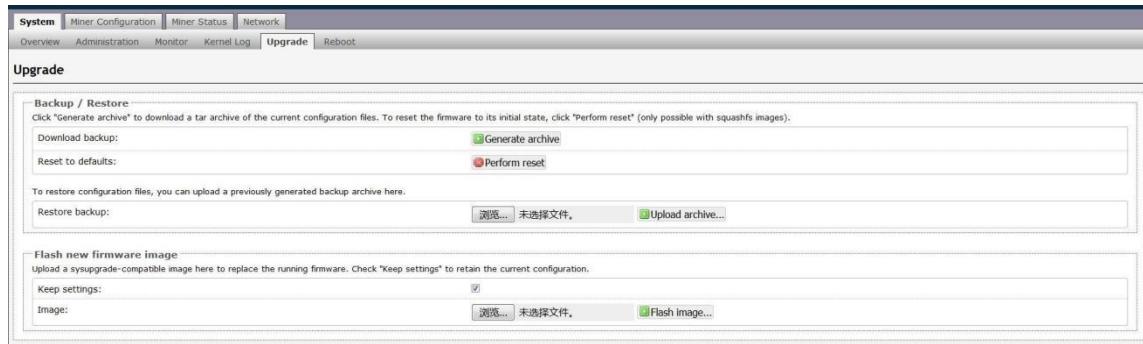

The screenshot shows the ANTMINER T15 web interface with the 'Upgrade' tab selected. It includes the following sections:


- Backup / Restore**: Click "Generate archive" to download a tar archive of the current configuration files. To reset the firmware to its initial state, click "Perform reset" (only possible with squashfs images).
  - Download backup:  Generate archive
  - Reset to defaults:  Perform reset
- Flash new firmware image**: Upload a sysupgrade-compatible image here to replace the running firmware. Check "Keep settings" to retain the current configuration.
  - Keep settings:
  - Image:  浏览... 未选择文件.  Upload archive...
  - Flash image...

2. For **Keep Settings**:

- Select the check box to keep your current settings (default).
- Clear the check box to reset the server to default settings.

3. Click the **选择文件 (Browse)** button and navigate to the upgrade file. Select the upgrade file, then click **Flash image**. A message appears notifying you if the T15 firmware can be upgraded and if yes, will then proceed to flash the image.

4. When the upgrade is completed, the following message appears:

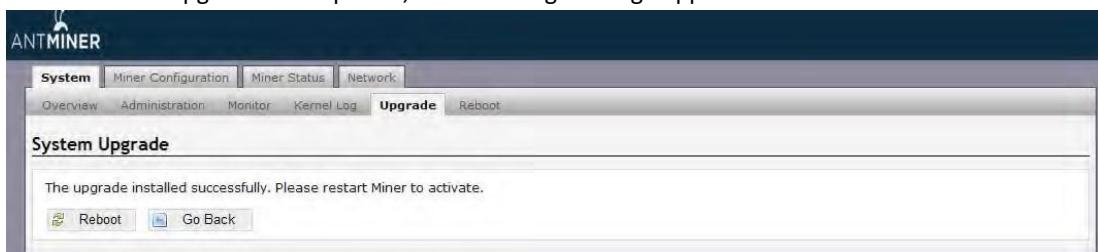


5. Click one of the following options:

- **Reboot** - to restart the server with the new firmware.
- **Go Back** - to continue mining with the current firmware. The server will load the new firmware next time it is restarted.

### 5.3 Modifying Your Password

**To change your login password:**

1. In **System**, click the **Administration** tab.
2. Set your new password, then click **Save & Apply**.

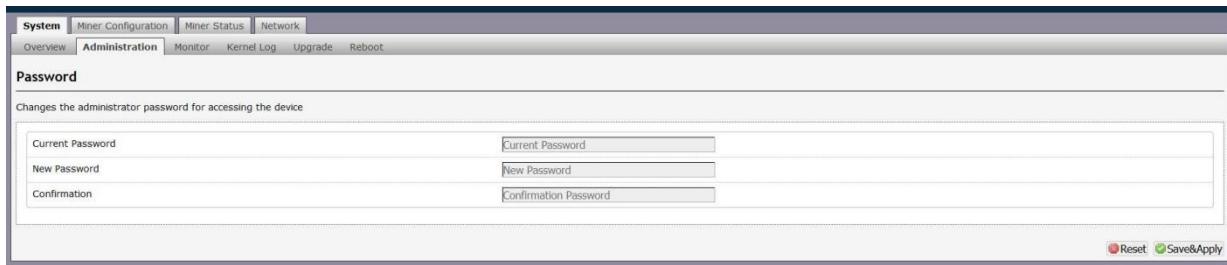

### 5.4 Restoring Initial Settings

**To restore your initial settings**

1. Turn on the server and let it run for 5 minutes.
2. On the controller front panel, press and hold the **Reset** button for 10 seconds.



Resetting your server will reboot it and restore its default settings. The red LED will automatically flash once every 15 seconds if the reset is operated successfully.

**Regulations:**
**FCC Notice (FOR FCC CERTIFIED MODELS):**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**EU WEEE: Disposal of Waste Equipment by Users in Private Household in the European Union**


This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**台灣 ROHS:**

設備名稱: T15 服務器, 型號: 240-A

單元	有害物质					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr+6)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
外殼	○	○	○	○	○	○
電路板組件	—	○	○	○	○	○
其他線材	—	○	○	○	○	○

備考 1. “超出 0.1 wt %” 及 “超出 0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。

備考 2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。

備考 3. “—” 係指該項限用物質為排除項目