



# **S19j XP**

## User Guide

Mar. 2025

**BITMAIN**

BITMAIN TECHNOLOGIES INC.

[www.bitmain.com](http://www.bitmain.com)

## Table of Contents

<b>1 Overview .....</b>	<b>1</b>
<b>1.1 Server components .....</b>	<b>1</b>
<b>1.2 Server Specification.....</b>	<b>4</b>
<b>2 Setting up the server .....</b>	<b>6</b>
<b>2.1 Get server IP .....</b>	<b>6</b>
<b>2.2 Configuring the server .....</b>	<b>8</b>
<b>2.3 Monitor your server .....</b>	<b>8</b>
<b>3 Administering Your Server .....</b>	<b>10</b>
<b>3.1 Checking Your Firmware Version .....</b>	<b>10</b>
<b>3.2 Upgrading Your System .....</b>	<b>10</b>
<b>3.3 Modifying your Password .....</b>	<b>11</b>
<b>3.4 Restoring Initial Settings .....</b>	<b>11</b>
<b>3.5 Error Code .....</b>	<b>11</b>
<b>4 Server Disassembly and Installation .....</b>	<b>17</b>
<b>4.1 Control Panel Disassembly and Installation .....</b>	<b>17</b>
<b>4.2 Power Supply Disassembly and Installation .....</b>	<b>18</b>
<b>4.3 Hash Board Disassembly and Installation .....</b>	<b>19</b>
<b>5. Environmental Requirements .....</b>	<b>21</b>
<b>5.1 Basic Environmental Requirements .....</b>	<b>21</b>
<b>5.1.1 Climatic Conditions .....</b>	<b>21</b>
<b>5.1.2 Site Requirements of the Server Running Room .....</b>	<b>21</b>
<b>5.1.3 Electromagnetic Environmental Conditions .....</b>	<b>21</b>
<b>5.2 Other Environmental Requirements .....</b>	<b>22</b>
<b>5.2.1 Mechanical Active Substances .....</b>	<b>22</b>
<b>5.2.2 of Corrosive Gas .....</b>	<b>22</b>
<b>6 Regulations .....</b>	<b>23</b>
<b>6.1 Federal Communications Commission (FCC) .....</b>	<b>23</b>
<b>6.2 Industry Canada .....</b>	<b>23</b>
<b>6.3 European Community .....</b>	<b>23</b>
<b>6.4 Taiwan ROHS .....</b>	<b>25</b>
<b>6.5 FCC Supplier's Declaration of Conformity .....</b>	<b>26</b>
<b>6.6 EU Declaration of Conformity .....</b>	<b>27</b>

---

<b>7 Warranty .....</b>	<b>28</b>
-------------------------	-----------

## 1 Overview

The S19j XP server is one of Bitmain's latest Air-Cooling server product in the 19 server series. This guide set S19j XP as an example introduce various operations in details, and other server operation are the same.



**Front view**




**Back view**

**Caution:**

- 1. Please note that the equipment must only be placed vertically as shown in the diagram above. Placing it horizontally will increase the failure rate of the equipment!!!**
2. The equipment must be connected to an earthed mains socket-outlet. The socket-outlet shall be installed near the equipment and shall be easily accessible.
3. When the equipment is power off, be sure to power off all power inputs.
4. DO NOT remove any screws and cables tied on the product.
5. DO NOT plug or remove the device when it is powered on.
6. The equipment relies on the PDU being powered down to disconnect the power.

### 1.1 Server components

The main components and controller front panel of S19j XP servers are shown in the following figure:

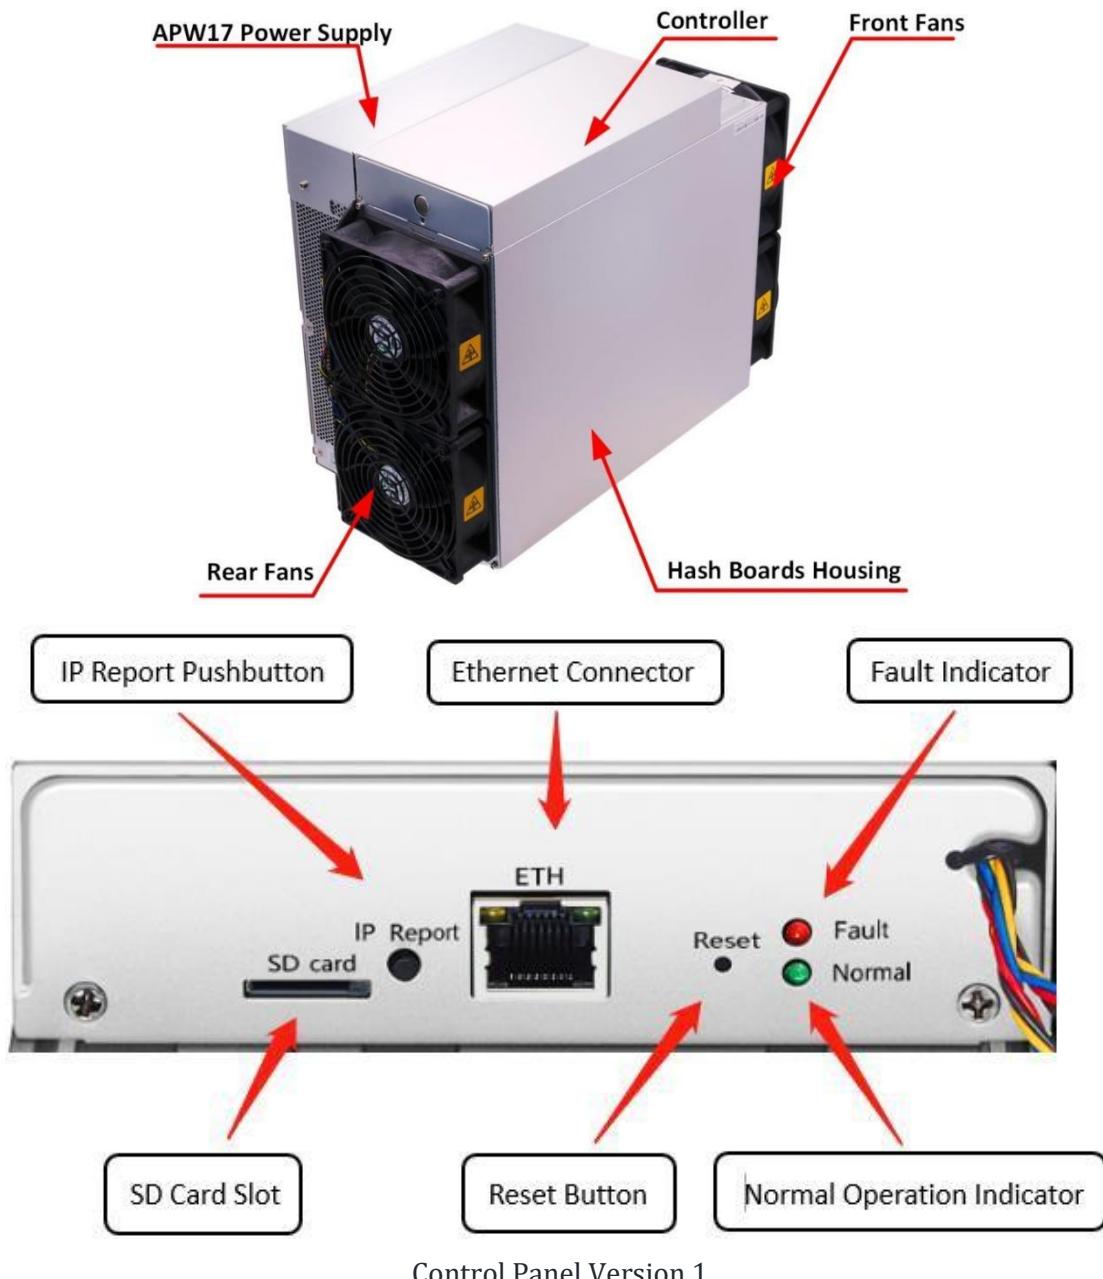

Control Panel Version 2

**NOTE:**

There are three versions of the control panel, please refer to the pictures above to check the differences of SD Card Slots.



## Power Supply:

### NOTE:

1. Power supply APW17 is part of S19j XP server. For detailed parameters, please refer to the specifications below.
2. One ANTWIRE-20SP power cord is needed and should be connected to PDU.

## 1.2 Server specification

Table 1-1 Product Glance

Product Glance	Value			
Model	<b>S19j XP</b>			
Version	<b>K1-20</b>			
Crypto algorithm/coins	<b>SHA256   BTC/BCH</b>			
Typical hashrate, <b>TH/s<sup>(1-1)</sup></b>	<b>151</b>	<b>143</b>	<b>136</b>	<b>130</b>
Power on wall @25°C <sup>(1-2)</sup> , <b>Watt<sup>(1-1)</sup></b>	<b>3247</b>	<b>3075</b>	<b>2924</b>	<b>2795</b>
Power efficiency on wall@25°C <sup>(1-2)</sup> , <b>J/TH<sup>(1-1)</sup></b>	<b>21.5</b>			

Table 1-2 Detailed Characteristics of Product

Detailed Characteristics	Value
<b>Power supply</b>	
Power supply AC input voltage, <b>Volt<sup>(2-1)</sup></b>	<b>220~277V</b>
Power supply AC Input Frequency Range, <b>Hz</b>	<b>50~60</b>
Power supply AC Input current, <b>Amp</b>	<b>20</b>
Adapted AC output power requirement, <b>W</b>	<b>4000</b>
<b>Hardware Configuration</b>	
Network connection mode	<b>RJ45 Ethernet 10/100M</b>
Server size (Length*Width*Height, w/o package), <b>mm</b>	<b>400*195*290</b>
Server size (Length*Width*Height, with package), <b>mm</b>	<b>570*316*430</b>
Net weight, <b>kg</b>	<b>14.9</b>
Gross weight, <b>kg</b>	<b>16.6</b>
Noise <sup>(2-2)</sup> @30°C, <b>dBA</b>	<b>76</b>
Max airflow <sup>(2-3)</sup> , <b>CFM</b>	<b>480</b>
<b>Environment Requirements</b>	
Operation temperature, <b>°C</b>	<b>-15~35</b>
Storage temperature, <b>°C</b>	<b>-20~70</b>
Operation humidity, <b>RH</b>	<b>10%~90%(non-condensing)</b>
Operation altitude, <b>m<sup>(2-4)</sup></b>	<b>≤2000</b>

### Notes:

(1-1) The Hashrate value, Power on wall, and Power efficiency on wall are all typical values, The actual Hashrate value fluctuates by  $\pm 3\%$ , and the actual Power on wall and Power efficiency on wall fluctuate by  $\pm 5\%$ .

(1-2) Inlet air temperature.

(2-1) Caution: Wrong input voltage may probably cause server damaged

(2-2) The noise is loudest when the fan is under maximum RPM(rotation per minute).

(2-3) When the server is dusty or the environment is poorly ventilated, the server

airflow will reduce.

(2-4) When the server is used at an altitude from 900m to 2000m, the highest operating temperature decreases by 1°C for every increase of 300m.

## 2 Setting up the server

### NOTE:

The file IPReporter.zip is supported by Microsoft Windows only.


### 2.1 Get server IP

Prepare tools to get server IP:

1. Go to the following site:


<https://file12.bitmain.com/shop-product/firmware/IP%20Reporter.zip>.

If the link is invalid, please visit the official firmware download page (<https://service.bitmain.com/support/download>) and select as shown in the image to download IPReporter.zip.

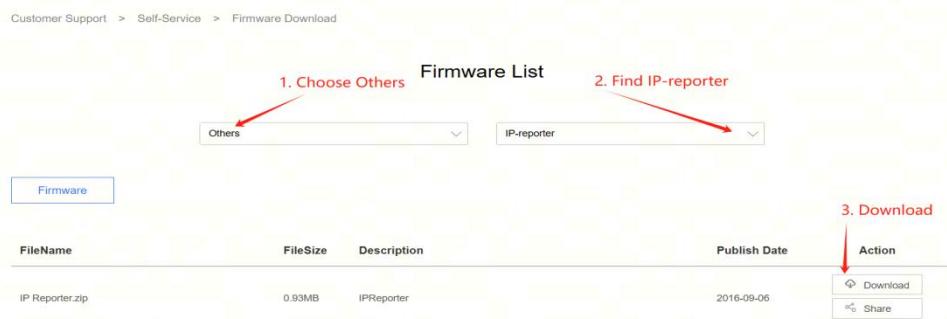

The screenshot shows the Bitmain Firmware Download interface. A red arrow labeled '1. Choose Others' points to the 'Others' dropdown menu. Another red arrow labeled '2. Find IP-reporter' points to the search bar containing 'IP-reporter'. A third red arrow labeled '3. Download' points to the 'Download' button in the 'Action' column for the IP Reporter.zip file.

2. Download the following file: IPReporter.zip.
3. Extract the file.
4. Right-click IPReporter.exe and run it as Administrator.
5. Click Start.

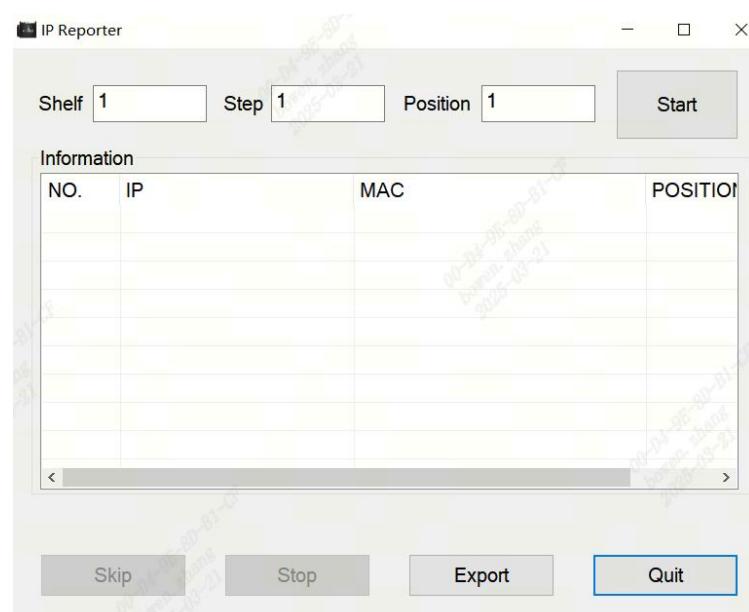

6. On the control panel, click the IP Report button. Hold it down until it beeps (about 5

seconds).



The IP address will be displayed in a window on your computer screen.



7. In your web browser, enter the IP address provided.
8. Proceed to login using root for both the username and password.
9. In the Protocol section, you can assign a Static IP address (optional).
10. Enter the IP address, Subnet mask, gateway and DNS Server.
11. Click "Save".
12. Click <https://support.BITMAIN.com/hc/en-us/articles/360018950053> to learn more about gateway and DNS Server.



## 2.2 Configuring the server

To configure the server:

1. Click **Settings** as below.
2. Set the options according to the following table:



**Note:**

- There are two working modes of S19j XP server: Normal mode and Sleep mode. The server enters the sleep mode under the condition that the control board is powered while hashboards are not powered.


Option	Description
Mining address	Enter the address of your desired pool. The S19j XP server can be set up with three mining pools, with decreasing priority from the first pool (pool 1) to the third pool (pool 3). The pools with low priority will only be used if all higher priority pools are offline.
Name	Your worker ID on the selected pool.
Password (optional)	The password for your selected worker.

3. Click **Save** after the configuration.

## 2.3 Monitor your server

To check the operating status of your server:

- Click **Dashboard** marked below to check the server status (taking S19j XP 151T as example).

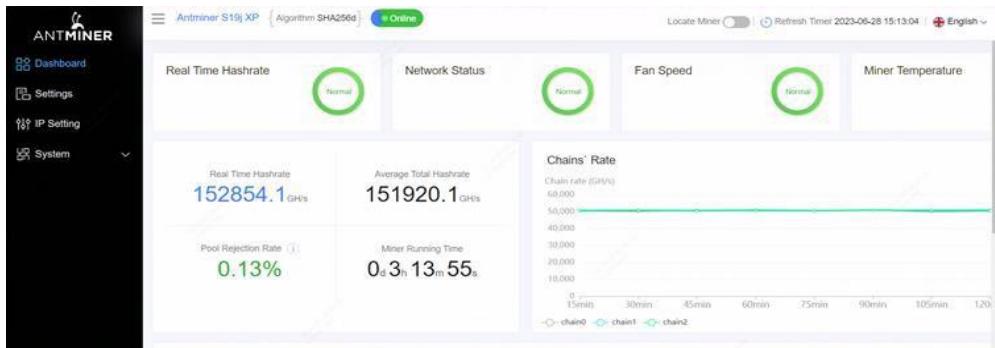

- Monitor your server according to the descriptions in the following table:

Option	Description
Number of chips	Number of chips detected in the chain.
Real Hashrate	Real-time hashrate of each hash board (GH/s).
Inlet Temp	Temperature of the inlet (°C).
Outlet Temp	Temperature of the outlet (°C).
Chip state	One of the following statuses will appear: <ul style="list-style-type: none"> <li><b>The Green Icon</b> - indicates normal</li> <li><b>The Red Icon</b> - indicates abnormal</li> </ul>

- Monitor your server according to the LED indicator light:


Status	Fault Indicator(RED)	Normal Indicator(GREEN)
Normal	OFF	ON
Over temperature	ON	OFF
Network disconnection	ON	OFF
Fan failure	ON	OFF

## 3 Administering Your Server

### 3.1 Checking Your Firmware Version

To check your firmware version:

1. Enter the backstage of your server, find the firmware version on the bottom.
2. Firmware Version displays the date of the firmware your server uses. In the examples below, the server is using firmware version 20250115190926.

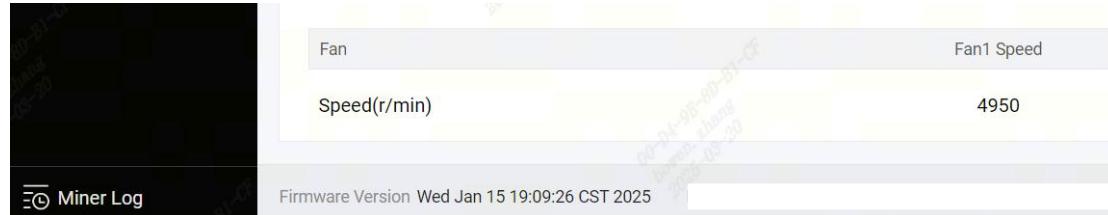


### 3.2 Upgrading Your System

**Caution:** Make sure that the S19j XP server remains powered during the upgrade process. If power fails before the upgrade is completed, you will need to return it to BITMAIN for repair.

To upgrade the server's firmware:


1. The latest Firmware is available on the BITMAIN official website:

<https://shop.bitmain.com/support/download>

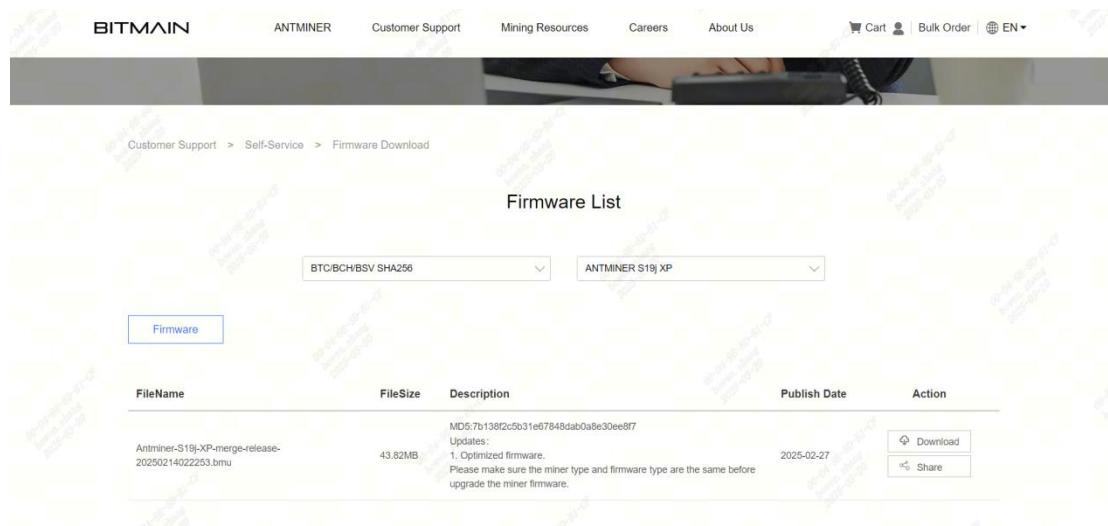

The screenshot shows the BITMAIN website's 'Customer Support > Self-Service > Firmware Download' section. The 'Firmware List' page for 'ANTMINER S19j XP' is displayed. A search bar shows 'BTC/BCH/BSV SHA256'. A table lists the firmware file: 'Antminer-S19j-XP-merge-release-20250214022253.bmu' with a file size of 43.82MB, published on 2025-02-27. Action buttons for 'Download' and 'Share' are shown.

2. In System, click Firmware Upgrade.

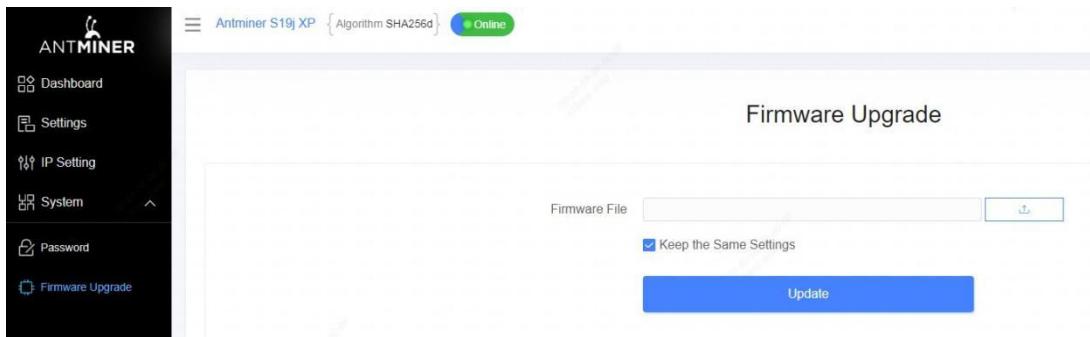

### 3. For Keep Settings:

- (1) Select “**Keep the same settings**” to keep your current settings (default).
- (2) Unselect “**Keep the same settings**” to reset the server to default settings.

4. Click the  button and navigate to the upgrade file. Select the upgrade file, then click Update.
5. When the upgrade is completed, restart the server. It will return to the settings page.
6. Click one of the following options:
  - **Reboot** - to restart the server with the new firmware.
  - **Go Back** - to continue mining with the current firmware. The server will load the new firmware next time it is restarted.

## 3.3 Modifying your Password

To change your login password:

1. In System, click the Password tab.
2. Set your new password, then click **Save**.

## 3.4 Restoring Initial Settings

To restore your initial settings

1. Turn on the server and let it run for 5 minutes.
2. On the controller front panel, press and hold the **Reset** button for 10 seconds.

**Caution:** Resetting your server will reboot it and restore its default settings. The red LED will automatically flash once every 15 seconds if the reset is operated successfully.

## 3.5 Error Code

Here is the server error code and the corresponding reasons and suggestions:

Error Code	Reason	Suggestion
<b>R:1</b>	Average total hashrate is low	Update the firmware to the latest version, replace the power supply, or return to factory for repair
<b>R1:1</b>	Chain1 is broken or has low hashrate	Check if chain1 connection is normal, update the firmware to the latest version, replace the hashboard, or return to factory for repair
<b>R2:1</b>	Chain2 is broken or has low hashrate	Check if chain2 connection is normal, update the firmware to the latest version, replace the hashboard, or return to factory for repair
<b>R4:1</b>	Chain3 is broken or has low hashrate	Check if chain3 connection is normal, update the firmware to the latest version, replace the hashboard, or return to factory for repair
<b>R8:1</b>	Chain4 is broken or has low hashrate	Check if chain4 connection is normal, update the firmware to the latest version, replace the hashboard, or return to factory for repair
<b>J1:1</b>	Chain1 has bad ASIC	Update the firmware to the latest version, replace the power supply, or return to factory for repair
<b>J2:1</b>	Chain2 has bad ASIC	Update the firmware to the latest version, replace the power supply, or return to factory for repair
<b>J4:1</b>	Chain3 has bad ASIC	Update the firmware to the latest version, replace the power supply, or return to factory for repair
<b>J8:1</b>	Chain4 has bad ASIC	Update the firmware to the latest version, replace the power supply, or return to factory

		for repair
<b>N:1</b>	Average total hashrate exceeds the sale hashrate too much	Update the firmware to the latest version
<b>N:2</b>	Frequency is reduced too much	Update the firmware to the latest version
<b>V:1</b>	Power initialization error	Replace the power supply, or return to factory for repair
<b>V:2</b>	Power supply is not calibrated	Update the firmware to the latest version, replace the power supply, or return to factory for repair
<b>V:3</b>	Power exceeds specified value	Check the current ambient temperature, replace the power supply, or return to factory for repair
<b>V:4</b>	Power supply voltage error	Check power output wiring, replace the power supply, or return to factory for repair
<b>F1:1</b>	Fan1 is not detected or its speed is low	Check if the fan1 connection is normal, replace the power supply, or replace the fan
<b>F2:1</b>	Fan2 is not detected or its speed is low	Check if the fan2 connection is normal, replace the power supply, or replace the fan
<b>F4:1</b>	Fan3 is not detected or its speed is low	Check if the fan3 connection is normal, replace the power supply, or replace the fan

	speed is low	
<b>F8:1</b>	Fan4 is not detected or its speed is low	Check if the fan4 connection is normal, replace the power supply, or replace the fan
<b>J:8</b>	The number of hashboards is less than the design	Check if the hashboard connection is normal, or replace the hashboard
<b>P:1</b>	High temperature protection	Check if the environment temperature is normal, or check if the gel on the hashboard is effective
<b>P:2</b>	Low temperature protection	Check if the environment temperature is normal
<b>J1:4</b>	Chain1 EEPROM data error	Redo the factory test for chain1
<b>J2:4</b>	Chain2 EEPROM data error	Redo the factory test for chain2
<b>J4:4</b>	Chain3 EEPROM data error	Redo the factory test for chain3
<b>J8:4</b>	Chain4 EEPROM data error	Redo the factory test for chain4
<b>J:6</b>	Temperature sensor error	Check if the hashboard connection is normal, update the firmware to the latest version,

		replace the hashboard, or return to factory for repair
<b>J1:5</b>	Chain1 PIC error	Check if chain1 connection is normal, update the firmware to the latest version, replace the hashboard, or return to factory for repair
<b>J2:5</b>	Chain2 PIC error	Check if chain2 connection is normal, update the firmware to the latest version, replace the hashboard, or return to factory for repair
<b>J4:5</b>	Chain3 PIC error	Check if chain3 connection is normal, update the firmware to the latest version, replace the hashboard, or return to factory for repair
<b>J8:5</b>	Chain4 PIC error	Check if chain4 connection is normal, update the firmware to the latest version, replace the hashboard, or return to factory for repair
<b>M:1</b>	Memory allocation error	Update the firmware to the latest version, replace the control board, or return to factory for repair
<b>J1:2</b>	The number of chain1 chips is less than the design	Check if chain1 connection is normal, update the firmware to the latest version, replace the hashboard, or return to factory for repair
<b>J2:2</b>	The number of chain2 chips is less than the design	Check if chain2 connection is normal, update the firmware to the latest version, replace the hashboard, or return to factory for repair
<b>J4:2</b>	The number of chain3 chips is less than the	Check if chain3 connection is normal, update the firmware to the latest version, replace the hashboard, or return to factory for repair

	design	
<b>J8:2</b>	The number of chain4 chips is less than the design	Check if chain4 connection is normal, update the firmware to the latest version, replace the hashboard, or return to factory for repair
<b>N:4</b>	Network connection is lost	Check if the network connection is normal


## 4 Server Disassembly and Installation

### 4.1 Control Panel Disassembly and Installation

1. Remove the screws from the upper cover of the server, as shown in the figure:



2. Remove the upper covers and unplug a total of 9 cables on the control board, including the operation board arrangement cables, the fan cables, the control board power supply cables and the power supply voltage regulating cables, as shown in the figure:

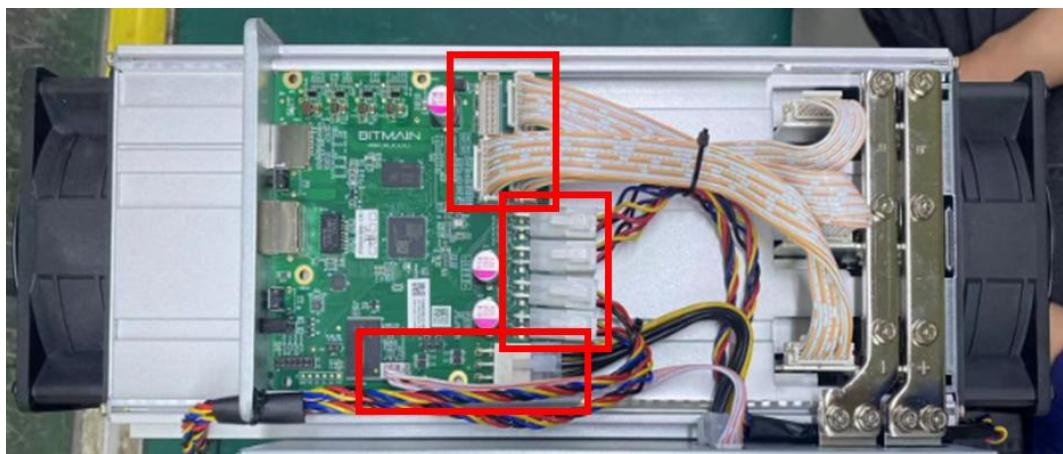


3. Remove 2 screws from the front cover of the control panel, remove the front cover, and push the control panel along the chute, as shown in the figure:




4. The installation steps are opposite to the disassembly steps, and it can be install in the steps of the opposite above order.

## 4.2 Power Supply Disassembly and Installation

1. Remove the 2 upper caps according to the above method.
2. Unplug the 2 cables connected to the control board and remove the 4 copper screws, as shown in the figure:

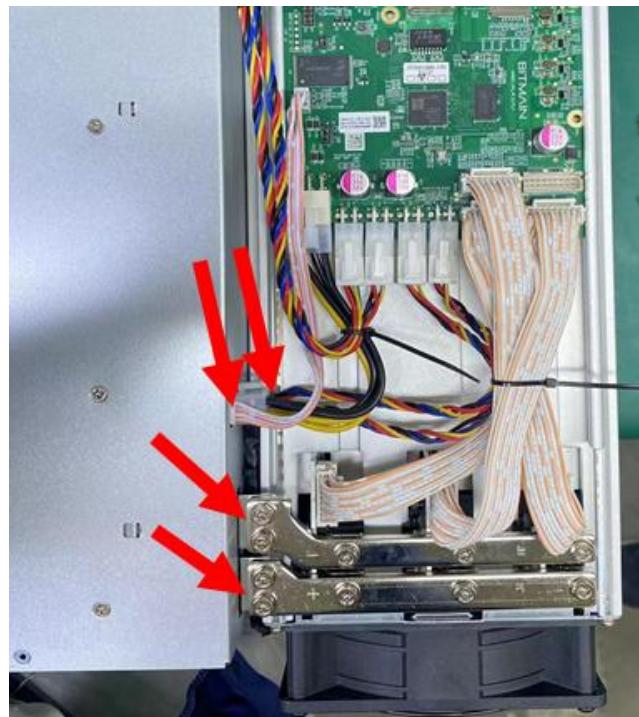


3. Remove the power supply and chassis fixing screws, as shown in the figure:
4. Take out APW power supply, as shown in the figure:

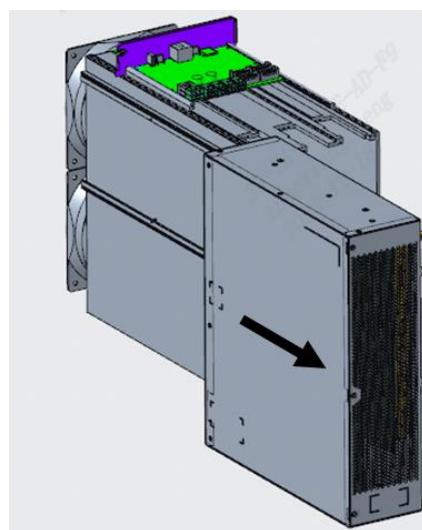


5. The installation steps are opposite to the disassembly steps, and it can be install in the steps of the opposite above order.

### 4.3 Hash Board Disassembly and Installation


1. Remove the 2 upper caps according to the above method.
2. Remove 4 screws and remove the fan and baffle, as shown in the figure:

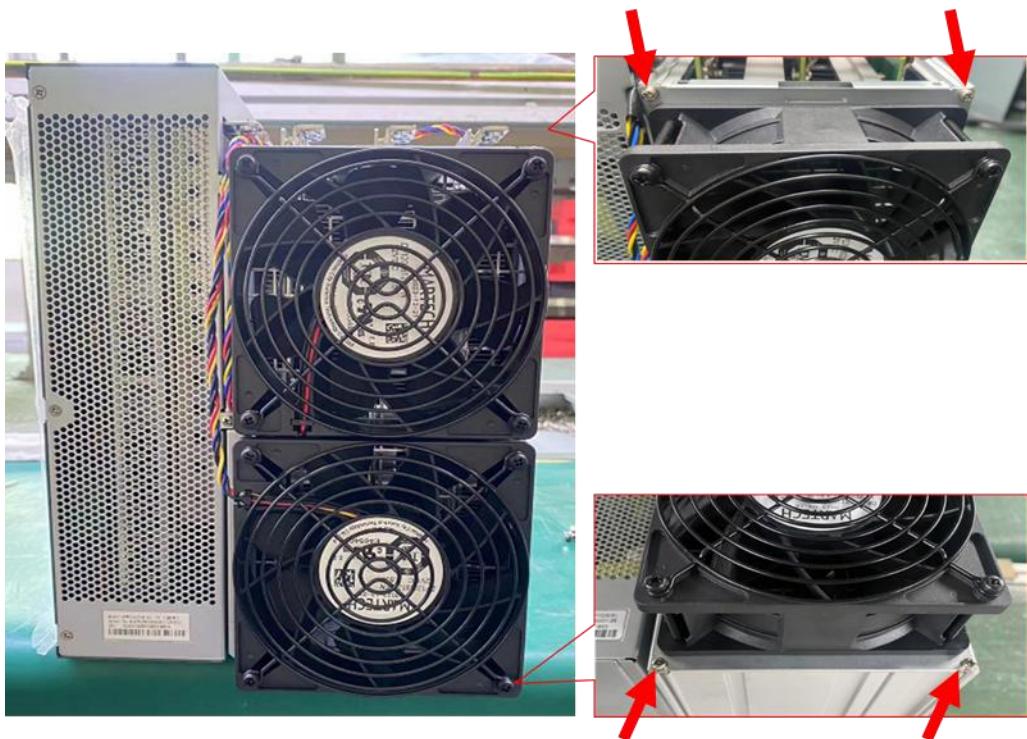

3. Pull out the cable of the hash board, unscrew two screws on the copper bar, and the hash board can be pulled out, as shown in the figure:

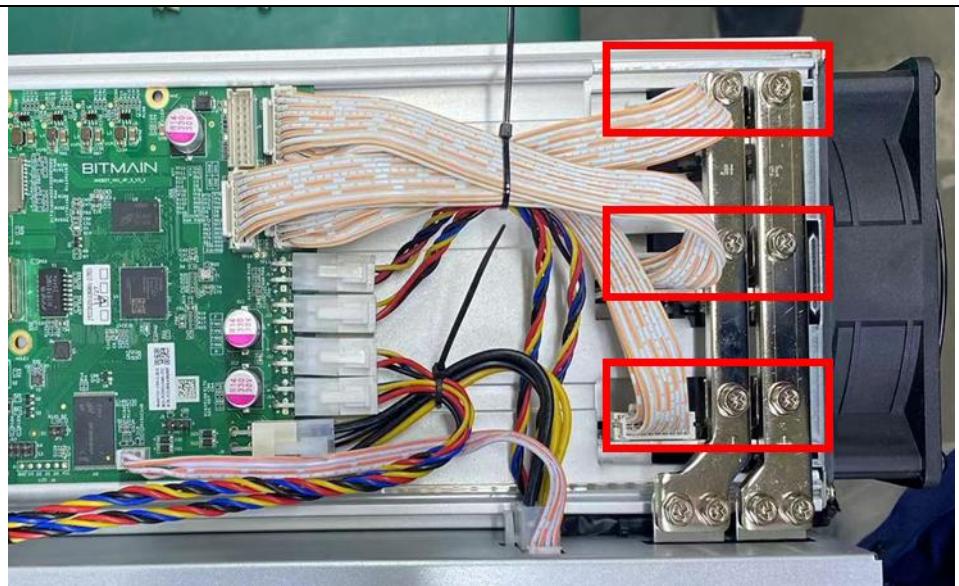

4. Remove the cables and screws, the rest of the hash board can be extracted, as shown in the figure:

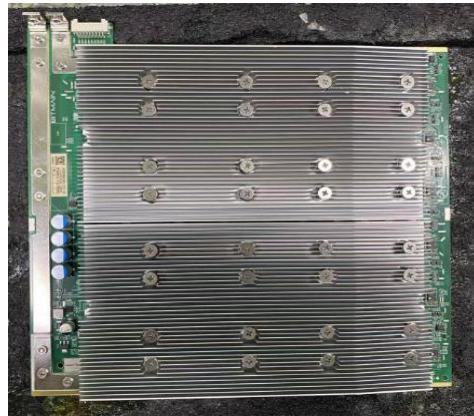

5. The installation steps are opposite to the disassembly steps, and you can install in the steps of the opposite above order.

## 5. Environmental Requirements

Please ensure that your server operates in accordance with the following environmental requirements.

### 5.1 Basic Environmental Requirements

#### 5.1.1 Climatic Conditions

Table 4-1 Requirements of climatic conditions

Descriptions	Requirements
Operating Temperature, °C	-15-35
Operating Humidity, RH	10%~90%(non-condensing)
Storage Temperature, °C	-20-70
Storage Humidity, RH	10%~90%(non-condensing)
Altitude, m	≤2000

#### 5.1.2 Site Requirements of the Server Running Room

Please ensure that the server operating room is kept away from industrial pollution sources:

- (1) For heavy pollution sources such as smelters and coal mines, maintain a distance of more than 5 km.
- (2) For moderate pollution sources such as chemical industries, rubber, and electroplating industries, maintain a distance of more than 3.7 km.
- (3) For light pollution sources such as food factories and leather processing factories, maintain a distance of more than 2 km. If unavoidable, choose a site in the perennial upwind direction of the pollution source.

Please do not set up your location within 3.7 km of the seaside or a saltwater lake. If this is unavoidable, ensure that the structure is as airtight as possible and equipped with air conditioning for cooling.

#### 5.1.3 Electromagnetic Environmental Conditions

Please keep your site away from transformers, high-voltage cables, transmission lines

and high-current equipment, for example, there should be no high-power AC transformers ( $>10\text{KA}$ ) within 20 meters, and no high-voltage power lines within 50 meters. Please keep your site away from high-power radio transmitters, for example, there should be no high-power radio transmitters ( $>1500\text{W}$ ) within 100 meters.

## 5.2 Other Environmental Requirements

The server running room shall be free of explosive, conductive, magnetically conductive and corrosive dust. The requirements of mechanical active substances are shown below.

### 5.2.1 Mechanical Active Substances

Table 4-2 Requirements of mechanical active substances

Mechanical Active Substance	Requirement
Sand, $\text{mg}/\text{m}^3$	$\leq 30$
Dust (suspended), $\text{mg}/\text{m}^3$	$\leq 0.2$
Dust (deposited), $\text{mg}/\text{m}^2\text{h}$	$\leq 1.5$

### 5.2.2 of Corrosive Gas

Table 4-3 Requirements of corrosive gas

Corrosive Gas	Unit	Concentration
$\text{H}_2\text{S}$	<b>ppb</b>	$< 3$
$\text{SO}_2$	<b>ppb</b>	$< 10$
$\text{Cl}_2$	<b>ppb</b>	$< 1$
$\text{NO}_2$	<b>ppb</b>	$< 50$
HF	<b>ppb</b>	$< 1$
$\text{NH}_3$	<b>ppb</b>	$< 500$
$\text{O}_3$	<b>ppb</b>	$< 2$
Note: <b>ppb</b> (part per billion) refers to the unit of concentration, 1 <b>ppb</b> stands for the volume ratio of part per billion.		

## 6 Regulations

### 6.1 Federal Communications Commission (FCC)

**FCC Notice:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**Caution:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### 6.2 Industry Canada

CAN ICES-003(A) / NMB-003(A)

### 6.3 European Community

**Warning:** Operation of this equipment in a residential environment could cause radio interference.

**UAB Bitmain Development Lithuania**

**Vilnius, Bistrycios g.40-21**

**EU WEEE**

**Disposal of Waste Equipment by Users in Private Household in the European**

**Union:**

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## 6.4 Taiwan ROHS

設備名稱：服務器 型號：S19j XP						
單元	限用物質及其化學符號					
	鉛	汞	鎘	六價鉻	多溴聯苯	多溴二苯醚
	(Pb)	(Hg)	(Cd)	(Cr6+)	(PBB)	(PBDE)
外殼	○	○	○	○	○	○
電源	—	○	○	○	○	○
風扇	—	○	○	○	○	○
控制板	—	○	○	○	○	○
算力板	○	○	○	○	○	○
線材組件	○	○	○	○	○	○

備考 1. “超出 0.1 wt %” 及 “超出 0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。

備考 2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。

備考 3. “—” 係指該項限用物質為排除項目。

## 6.5 FCC Supplier's Declaration of Conformity

### Supplier's Declaration of Conformity

**Trade Name:** BITMAIN  ANTMINER

**Model Number:** S19j XP

#### Responsible Part---U.S. Contact Information

Company: Bitmain Technologies Delaware Limited

Street Address: 100 Spectrum Center Drive, Suite 1255

City, State: City of Irvine, State of CA-California

Zip Code: CA 92618

Telephone number: +1 949-381-9884

Internet contact information: <https://www.bitmain.com/>

#### FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## 6.6 EU Declaration of Conformity

**BITMAIN**



### EU Declaration of Conformity

Manufacturer's Name: BITMAIN DEVELOPMENT PTE. LTD.

Manufacturer's Address: 1 Raffles Place, #36-01 One Raffles Place, Singapore 048616

For the following equipment

Trade Mark:  **ANTMINER** **BITMAIN**

Product: Server

Model No.: S19j XP

is herewith confirmed to comply with the requirements set out in Directive 2014/35/EU, Directive 2014/30/EU, and Directive 2011/65/EU. Compliance with 2014/35/EU and 2014/30/EU are evaluated by applying the following standards:

Safety standard: EN 62368-1:2014+A11

EMC standard: EN 55032:2015+A11:2020(Class A); EN 55032: 2015;

EN 55035: 2017; EN 55035: 2017+A11:2020

EN IEC 61000-3-2: 2019; EN 61000-3-3: 2013+A1:2019

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Signature:

Xiaoxian Luo

Date: 2025/4/8

Position/Title: President of Product II

## 7 Warranty

1. A 365-day warranty is provided starting from the shipping date. BITMAIN will cover shipping costs when shipping a replacement unit within the warranty period.
2. The warranty only applies to the original purchaser who purchased the machine directly from BITMAIN. Once the miner is resold, warranty coverage becomes the responsibility of the re-seller.
3. If the user fails to use the product per the given instructions, specifications, and conditions provided or changes the function settings of the unit without BITMAIN's prior consent, BITMAIN will not be liable for any damage arising therefrom.
4. Click <https://service.bitmain.com/support/policy> for a complete list of the Terms & Conditions that apply to all orders placed on <https://shop.bitmain.com>.

**Note:**

- Only new machines are eligible for a 365-day warranty; used machines are not included.